

Lesson 3 Installing and Configuring Raspberry Pi System

In this lesson, we will learn how to install and remotely log in to the Raspberry Pi OS under Windows. And we will download the code program to control the robot.

3.1 Preparation

- When studying this lesson, you need to prepare the following components first:

One SD card that has been formatted (we recommend using an SD card with memory above 16G), 1 card reader, Raspberry Pi development board.

- You need to insert the SD card into the card reader first, and then connect the card reader to the computer.

3.2 Downloading the Raspberry Pi OS Raspbian

Raspbian is the official OS of the Raspberry Pi Foundation. It is customized based on Debian GNU/Linux and can run on all versions of the Raspberry Pi motherboard. According to the experience, Raspbian combines Raspberry Pi the best. It is stable, powerful, and easy to use. It can basically meet the needs of various applications. This course uses Raspbian as the preferred OS for the Raspberry Pi. Next, we will teach you how to download the Raspberry Pi OS Raspbian. Now there are two ways to download Raspbian for Raspberry Pi OS (**we recommend Method One**).

Method One :

Raspberry Pi officially provides a Raspberry Pi OS - **Raspberry Pi OS (Legacy)** for educational and industrial users. The operating system has stable compatibility, and there will be no incompatibility with specific dependencies due to the update of the Raspberry Pi system. It also avoids frequent revision of the tutorial.

Raspberry Pi official description of the Raspberry Pi OS (Legacy):

<https://www.raspberrypi.com/news/new-old-functionality-with-raspberry-pi-os-legacy/>

1. visit the official website of the Raspberry Pi through a browser to download Raspbian:

<https://www.raspberrypi.com/software/operating-systems/>

After entering the Raspberry Pi official website page, click "[Raspberry Pi OS \(Legacy\)](#)" to jump to the corresponding location, or you can find the location of Raspberry Pi OS (Legacy) by sliding the page.



Operating system images

Many operating systems are available for Raspberry Pi, including Raspberry Pi OS, our official supported operating system, and operating systems from other organisations.

[Raspberry Pi Imager](#) is the quick and easy way to install an operating system to a microSD card ready to use with your Raspberry Pi. Alternatively, choose from the operating systems below, available to download and install manually.

Download:

[Raspberry Pi OS](#)

[Raspberry Pi OS \(64-bit\)](#)

[Raspberry Pi OS \(Legacy\)](#)

[Raspberry Pi Desktop](#)

2. Select the Raspberry Pi OS (Legacy) with desktop version, which contains a complete desktop system and recommended software packages.

Raspberry Pi OS (Legacy)

A stable legacy version of Raspberry Pi OS Buster.

[Not sure which version to download?](#)

Compatible with:

All Raspberry Pi models

Raspberry Pi OS (Legacy) with desktop

Release date: January 28th 2022
System: 32-bit
Kernel version: 5.10
Debian version: 10 (buster)
Size: 1,116MB
[Show SHA256 file integrity hash:](#)
[Release notes](#)

Download

[Download torrent](#)
[Archive](#)


Raspberry Pi OS Lite (Legacy)

Release date: January 28th 2022
System: 32-bit
Kernel version: 5.10
Debian version: 10 (buster)
Size: 451MB
[Show SHA256 file integrity hash:](#)
[Release notes](#)

Download

[Download torrent](#)
[Archive](#)

3. Click "Download", download the ".ZIP" file, and wait for the download to complete: (remember where the file is saved).
4. Find the ".ZIP" file you just downloaded, and extract it. The uncompressed file format of the file is ".img". Pay attention, you must name the path of the uncompressed .img file all English letters without special characters.



Method Two:

Due to compatibility issues with the latest Raspberry Pi official image file and dependent libraries. It may cause an error when the Raspberry Pi runs the program. We recommend

downloading the official older version of the Raspberry Pi image. **(This image file will not change and has been tested in detail and successfully).**

Using this image is a good idea to try if you run into problems with dependent libraries in the following lessons.

Raspberry Pi old version image file (2021-5-07) download address:

https://downloads.raspberrypi.org/raspios_armhf/images/raspios_armhf-2021-05-28/

Index of /raspios_armhf/images/raspios_armhf-2021-05-28

Name	Last modified	Size	Description
Parent Directory	-	-	-
2021-05-07-raspios-buster-armhf.info	2021-05-07 16:07	188K	
2021-05-07-raspios-buster-armhf.zip	2021-05-07 16:12	1.2G	
2021-05-07-raspios-buster-armhf.zip.sha1	2021-05-28 15:45	78	
2021-05-07-raspios-buster-armhf.zip.sha256	2021-05-28 15:45	102	
2021-05-07-raspios-buster-armhf.zip.sig	2021-05-28 15:00	488	
2021-05-07-raspios-buster-armhf.zip.torrent	2021-05-28 15:45	23K	

After the download is successful, extract the ZIP file and get a ".img" file.

3.3 Burning the downloaded Raspberry Pi OS to the SD card

We recommend using the Raspberry Pi Imager tool officially provided by the Raspberry Pi. Raspberry Pi Imager is a new image burning tool launched by the Raspberry Pi Foundation. Users can download and run this tool on Windows, macOS and Ubuntu to burn the OS image for the Raspberry Pi. Its usage is similar to Etcher and win32diskimager.

3.3.1 Downloading Raspberry Pi Imager


1. Visit the official website of Raspberry Pi to download through a browser:

<https://www.raspberrypi.org/downloads/>


- For Windows OS, click "Raspberry Pi Imager for Windows" to download.
- For Mac OS, click "Raspberry Pi Imager for macOS" to download.
- For Linux OS, Click "Raspberry Pi Imager for Ubuntu" to download.

After the download is complete, install the software and burn the Raspberry Pi OS .


Now take **Windows** as an example.

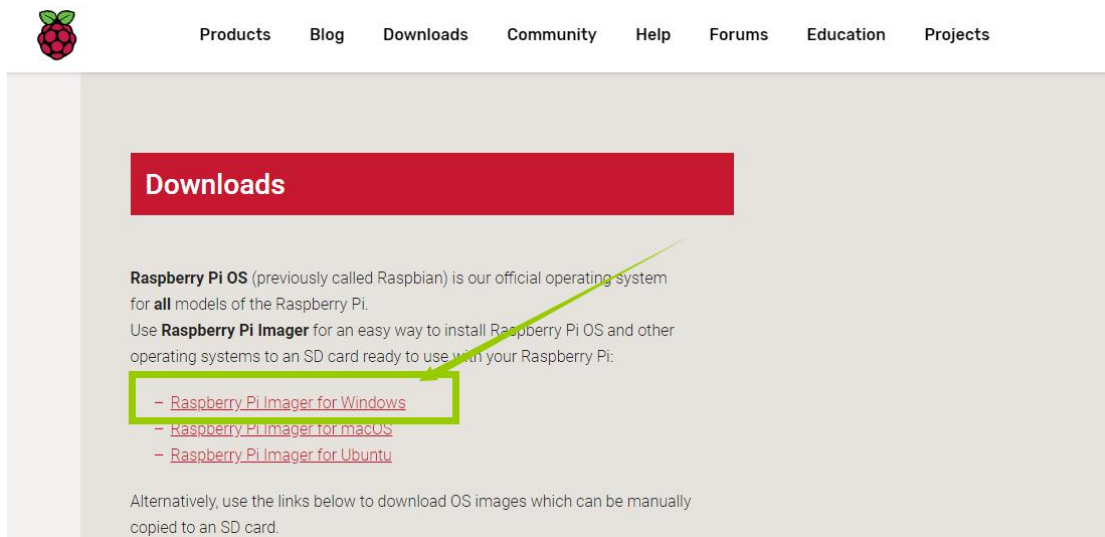

2. Open the downloaded file "imager.exe" and click "Install".

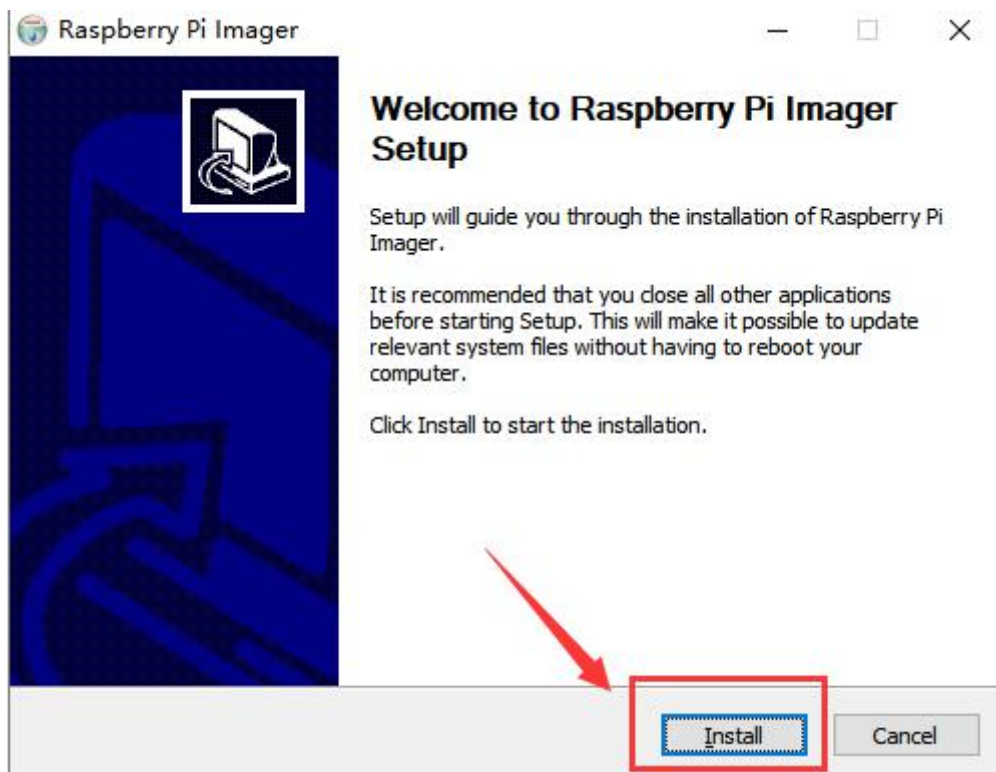

3. Then click "Finish".

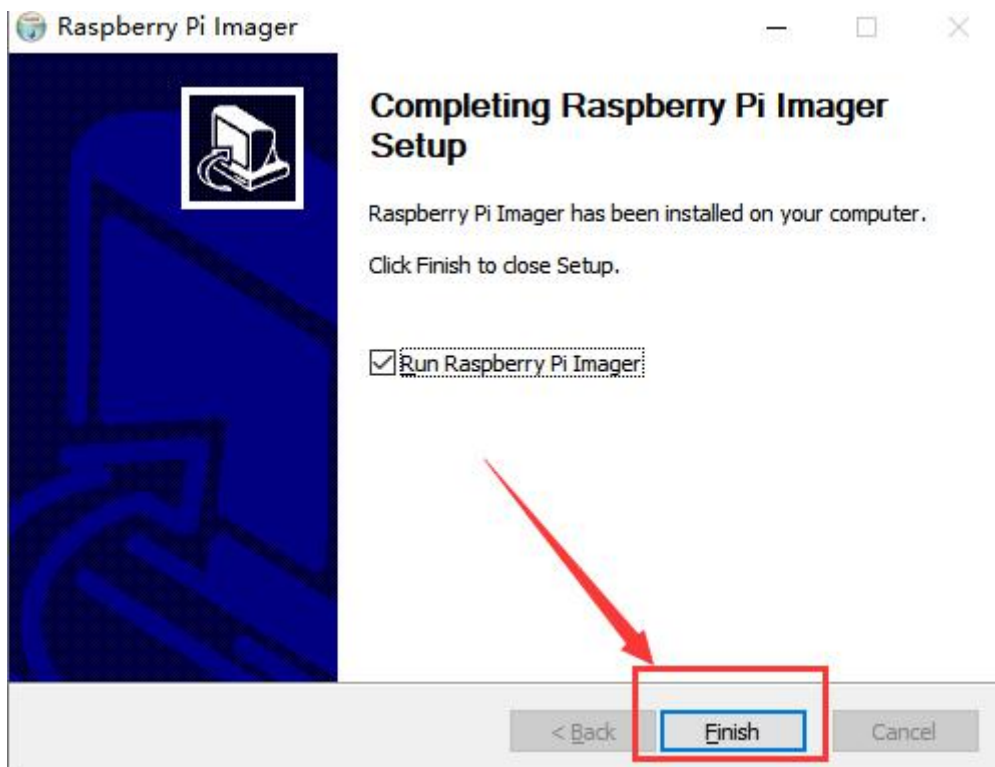

4. The software interface after opening is as shown below:




3.3.2 Burning Raspberry Pi OS to SD card with Raspberry Pi Imager


1. Click "CHOOSE OS" on the opened Raspberry Pi Imager software interface




2. Click "Use custom" and select a custom ".img" file from your computer, which is the ".img" file of the Raspberry Pi OS that we downloaded and decompressed before.

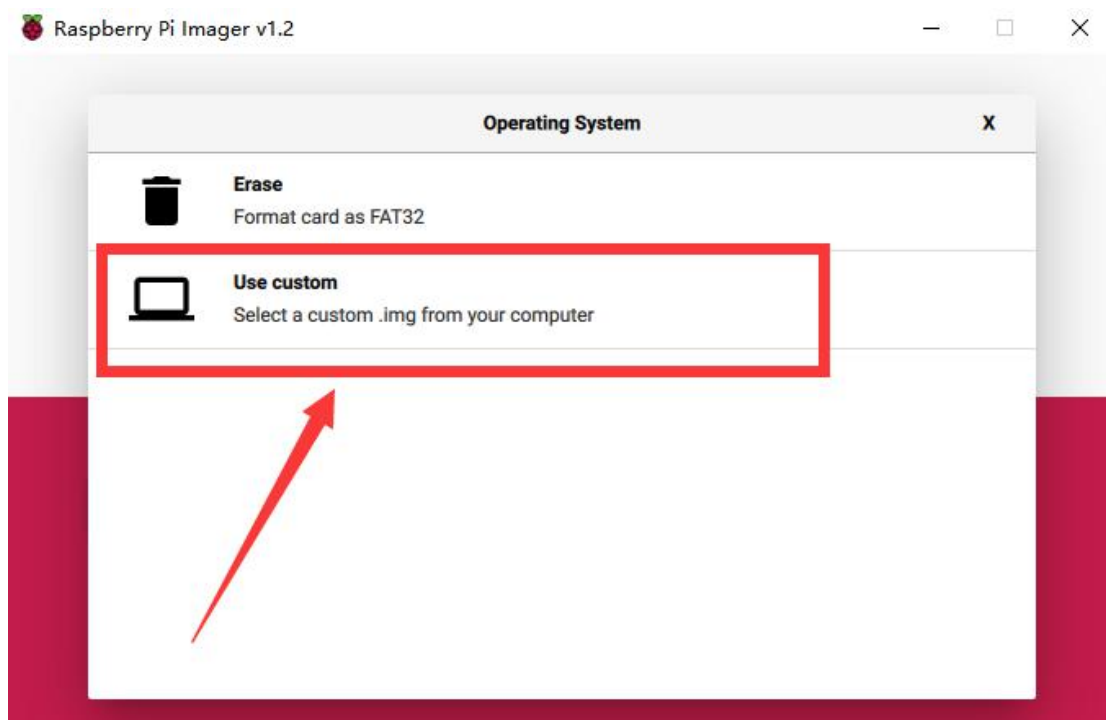

3. Find the ".img" file of the Raspberry Pi OS that we downloaded and decompressed before.
Click "Open".

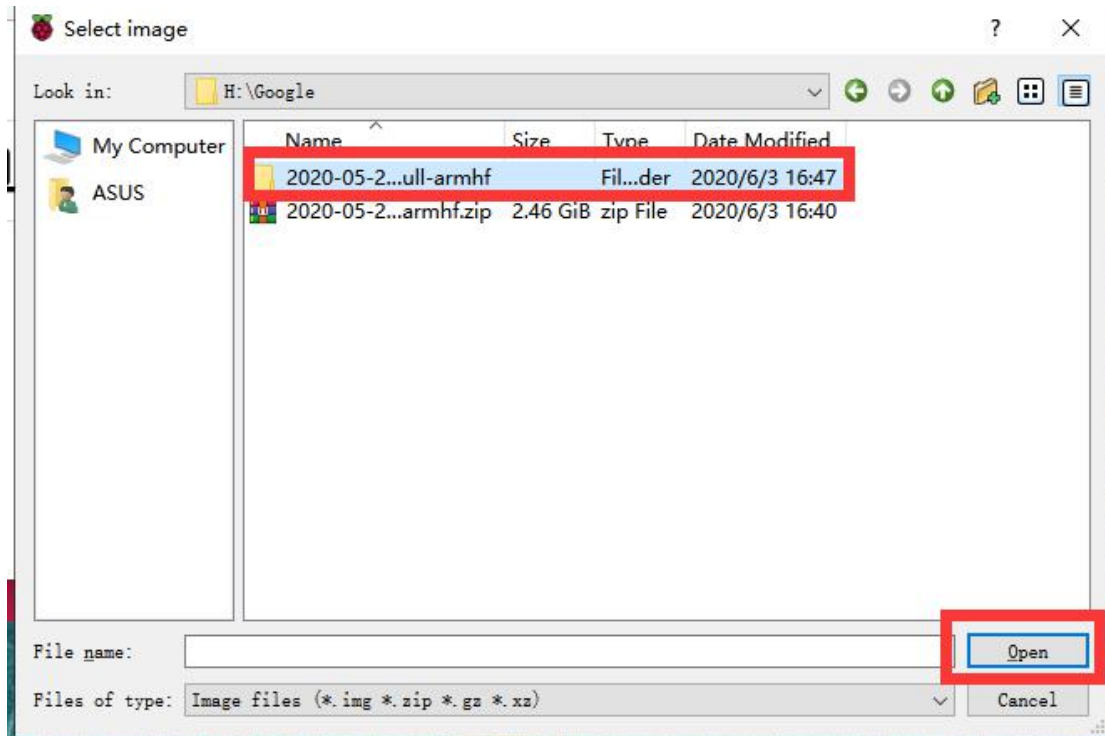

4. Select the ".img" file and click "Open".

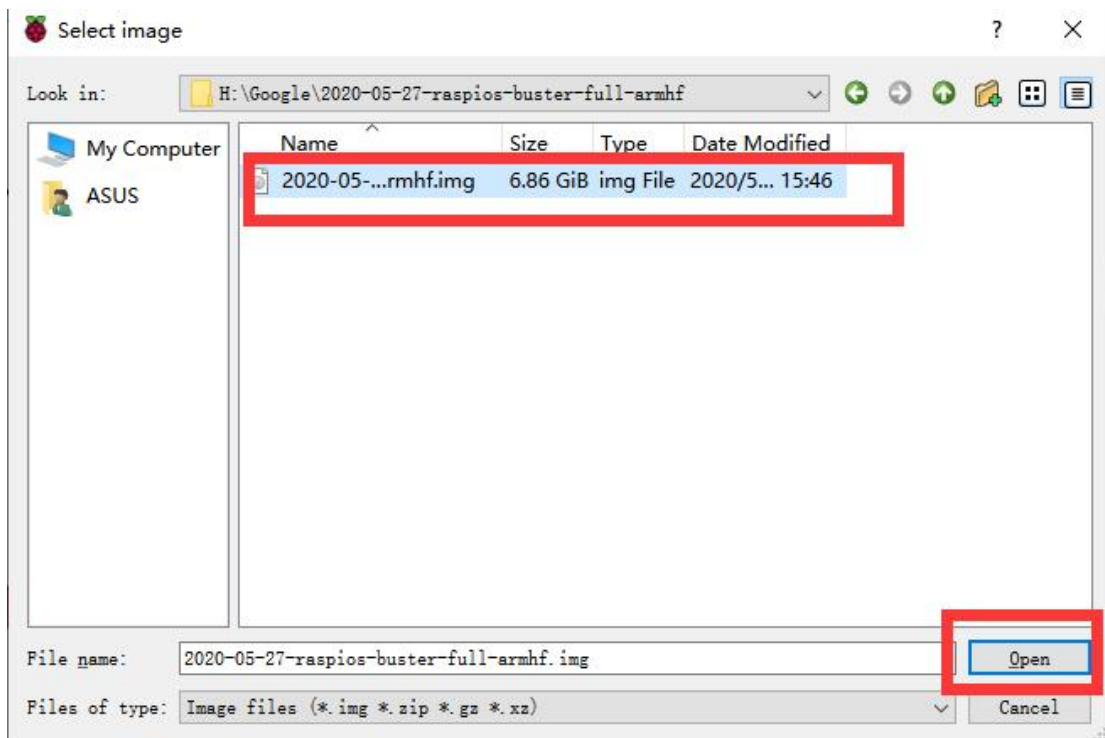


5. Then on the interface of Raspberry Pi Imager, the ".img" file of our selected Raspberry Pi OS will appear.




6. Click "CHOOSE SD".




7. Then select the SD card we need to burn.

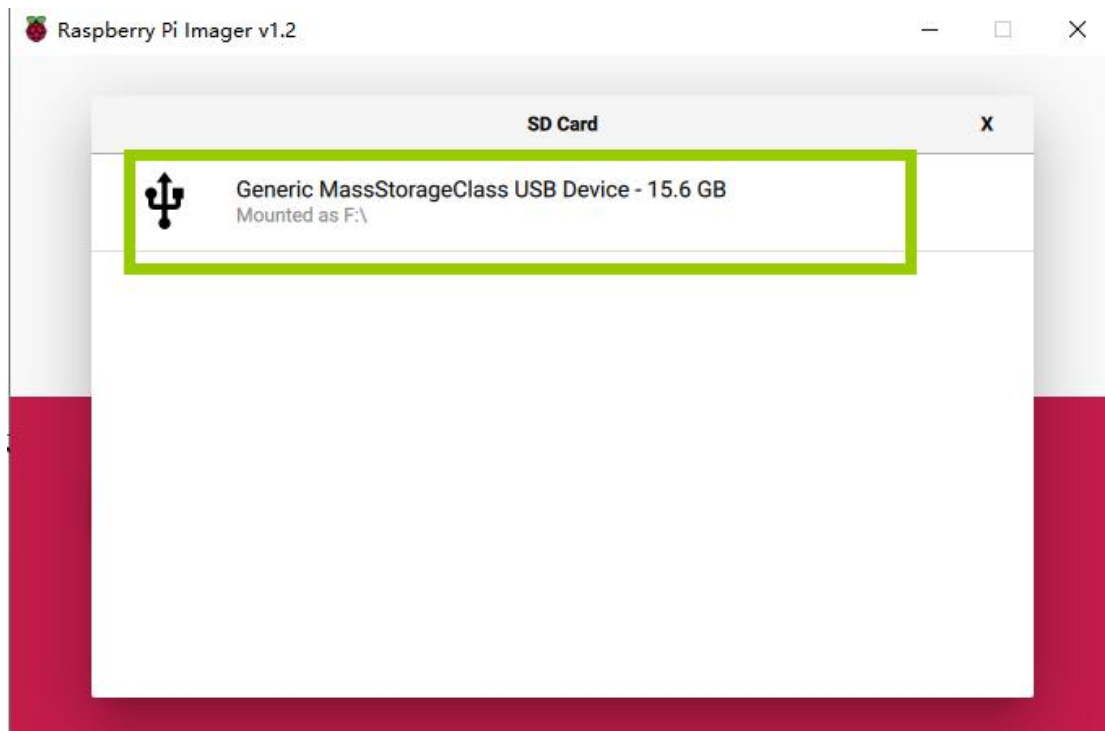

8. Click "WRITE" to write it to the SD card. Wait for the burn to complete.

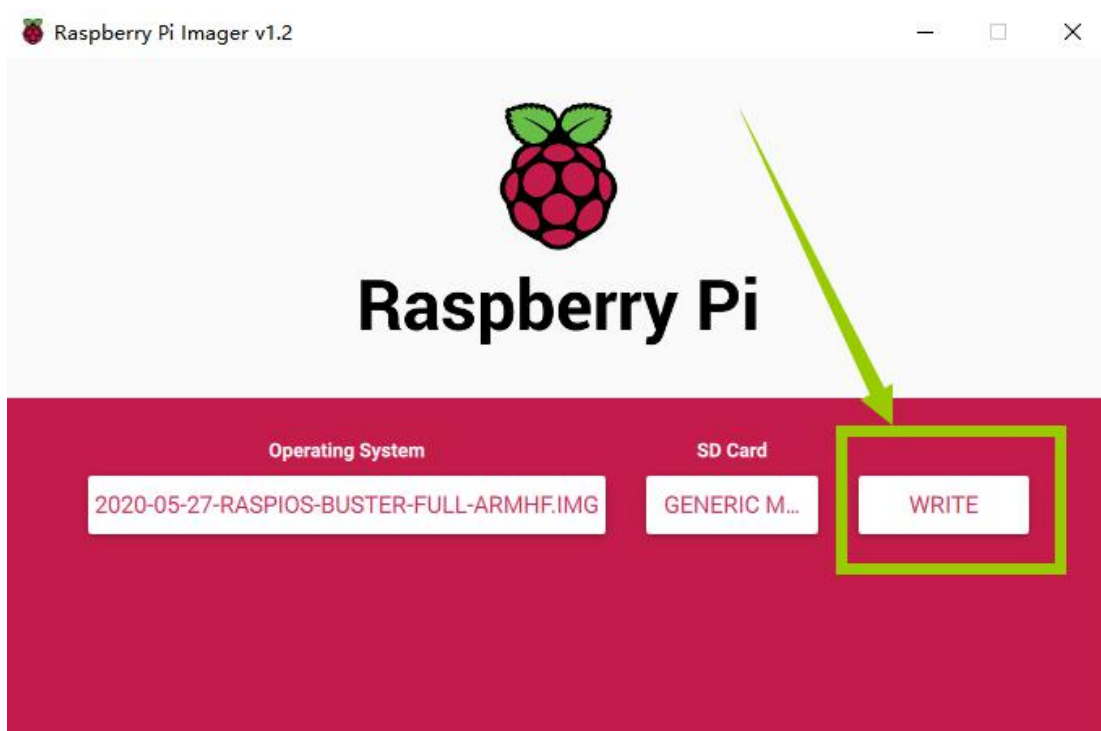

9. After the burning is completed, the following message will be prompted, indicating that the burning is finished, click "CONTINUE".

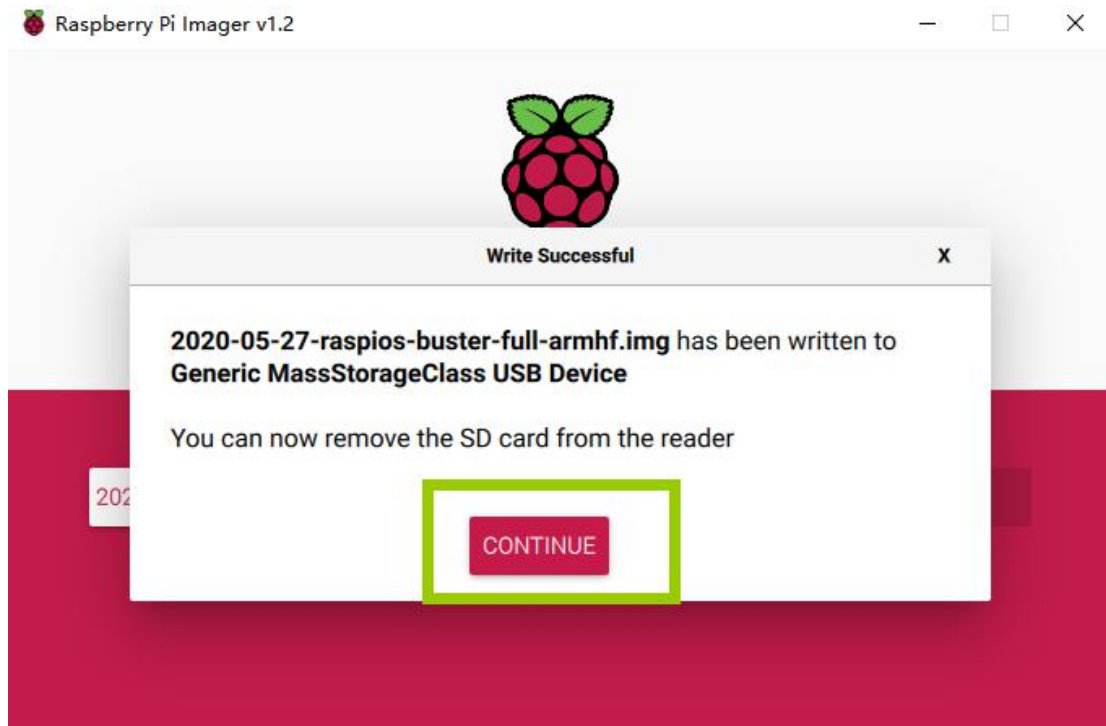

【Pay Attention】


Don't remove the SD card after burning! After the Raspberry Pi Imager is burned, the memory card will be ejected in the program. This will cause the subsequent copy operation to prompt that the SD card has not been found. You can unplug the card reader from the computer and then plug it into the computer again. It is necessary to configure SSH and WIFI connection later. At this time, once the SD card is put into the Raspberry Pi to boot, it may cause subsequent headless WIFI configuration failure.

3.4 Starting the Raspberry Pi SSH service


SSH is a protocol designed to provide security for remote login sessions and other network services. Through the SSH service, you can remotely use the command line of the Raspberry Pi on another machine. In the subsequent operations and the process of using the Raspberry Pi, you can control the Raspberry Pi through another machine in the same local area network without connecting the mouse, keyboard and monitor to the Raspberry Pi. After 2016, Raspbian distributions disable the SSH service by default, so we need to manually enable it.

The following steps are operated under Windows OS, other OS are similar. If the operation is unsuccessful, please see the second half of 3.5.


1. We first enter the driver D of the computer, click "View" in the upper left corner, and select "File Extension", as shown below:

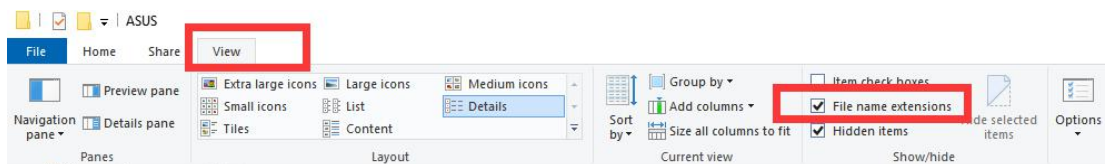

2. Right-click on the blank space of the D drive, select "New", and select "Text Document".

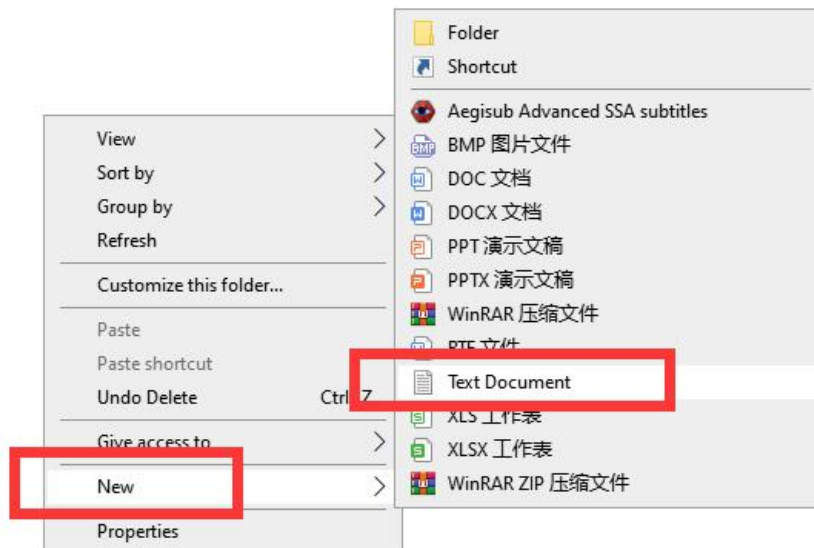

3. Name the file "ssh", as shown below:

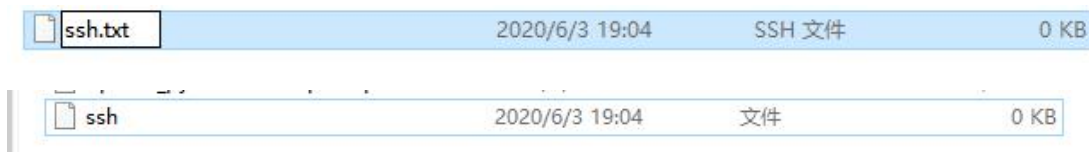

4. Then delete the suffix ".txt". We will get an ssh file without any extension. As shown below:


5. Copy this ssh file to the root directory of the SD card of the Raspberry Pi OS. When the Raspberry Pi starts, it will automatically find this ssh file. If it is found, it will start SSH. This method only needs to be used once. After that, every time you start the Raspberry Pi, it will automatically start SSH without repeating the above operations. Copy the ssh file to the Raspberry Pi as shown below:



3.5 Setting up Raspberry Pi WIFI wireless connection

Next, we also need to set up a WIFI wireless connection for the Raspberry Pi.


1. Create a new file named wpa_supplicant.conf in the root directory of the D driver of the computer.



2. Click to select the wpa_supplicant.conf file, right-click the mouse, and select "Open Mode (H)".



3. Select "Notepad" to open it.

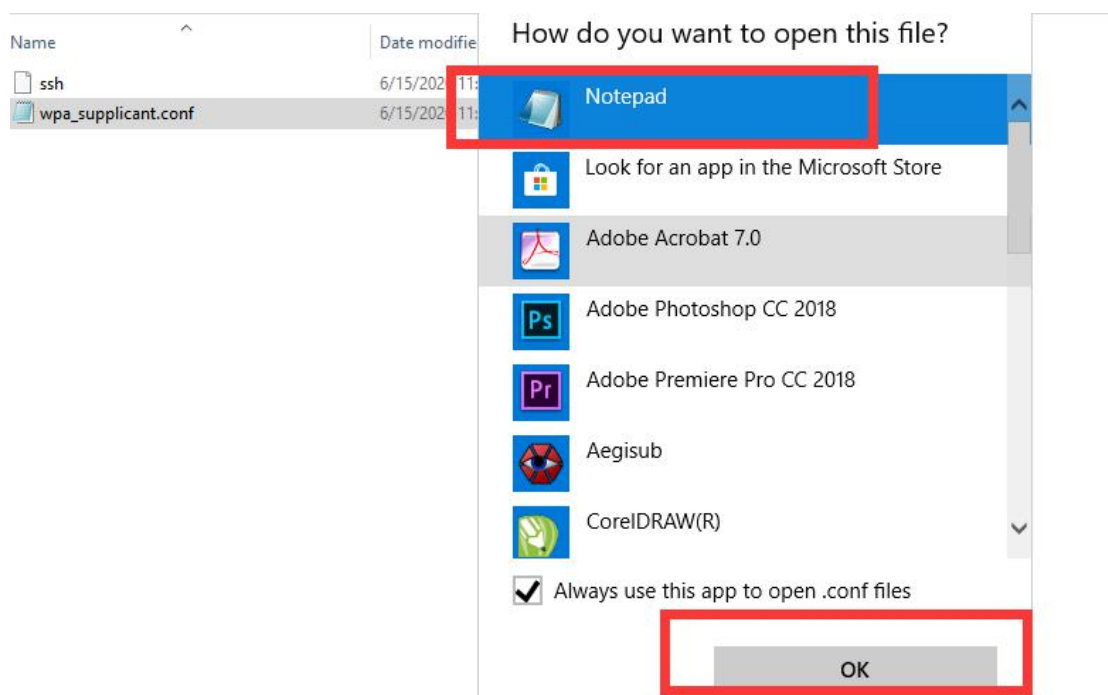

4. Write the following contents:

```
country=US

ctrl_interface=DIR=/var/run/wpa_supplicant GROUP=netdev


update_config=1

network={
    ssid="WIFI"

    psk="PASSWORD"

    key_mgmt=WPA-PSK

    priority=1
}
```

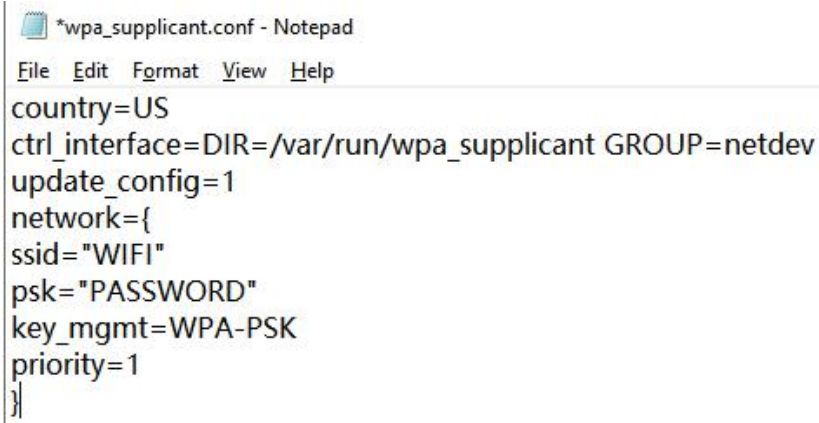


```
*wpa_supplicant.conf - Notepad
File Edit Format View Help
country=US
ctrl_interface=DIR=/var/run/wpa_supplicant GROUP=netdev
update_config=1
network={
ssid="WIFI"
psk="PASSWORD"
key_mgmt=WPA-PSK
priority=1
}
```

"Country" is your country code, do not modify it, the default is US; "ssid" needs to be changed to the name of the WIFI you want to connect; "psk" needs to be changed to the password of the WIFI you want to connect; other parts do not need to do any modifications.


For example, our company's WIFI name is Aadeept, WIFI password is 123456, and the modified wpa_supplicant.conf file is as shown below:

```
*wpa_supplicant.conf - Notepad
File Edit Format View Help
country=US
ctrl_interface=DIR=/var/run/wpa_supplicant GROUP=netdev
update_config=1
network={
ssid="Aadept"
psk="123456"
key_mgmt=WPA-PSK
priority=1
}
```

5. Save the set wpa_supplicant.conf file, and then copy it to the root directory of the SD card of the Raspberry Pi OS. As shown below:

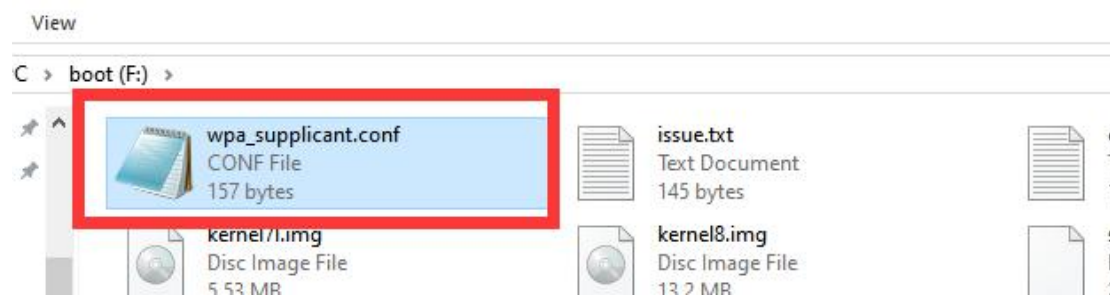

6. Now we can take out the SD card and put it into the "MICRO SD CARD" card slot on the Raspberry Pi development board, and use the Type-C data cable to supply power to the Raspberry Pi. And then the Raspberry Pi will start up and run.

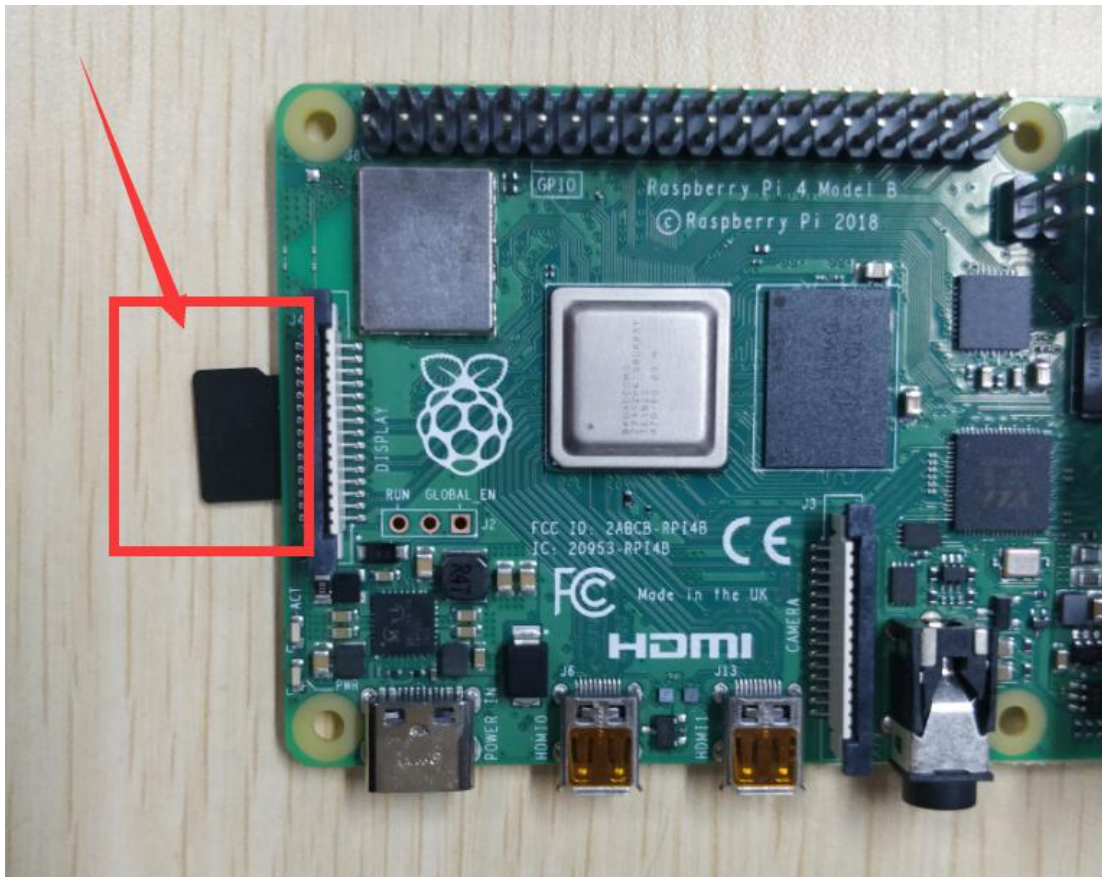


Note: If the above steps are not successful in configuring SSH and WiFi, please try another way to configure SSH and WiFi: (If you cannot complete the above steps using a **Mac** OS, you can use this method)


1. Connect the Raspberry Pi to the display through the mouse, keyboard, and HDMI cable.
2. Click the WiFi icon in the upper right corner of the desktop (the WiFi icon in the picture is the connected WiFi status), then select the WiFi name and enter the password.



3. Select "Preferences" from the drop-down list in the main menu of the Raspberry Pi desktop, and then select "Raspberry Pi Configuration".

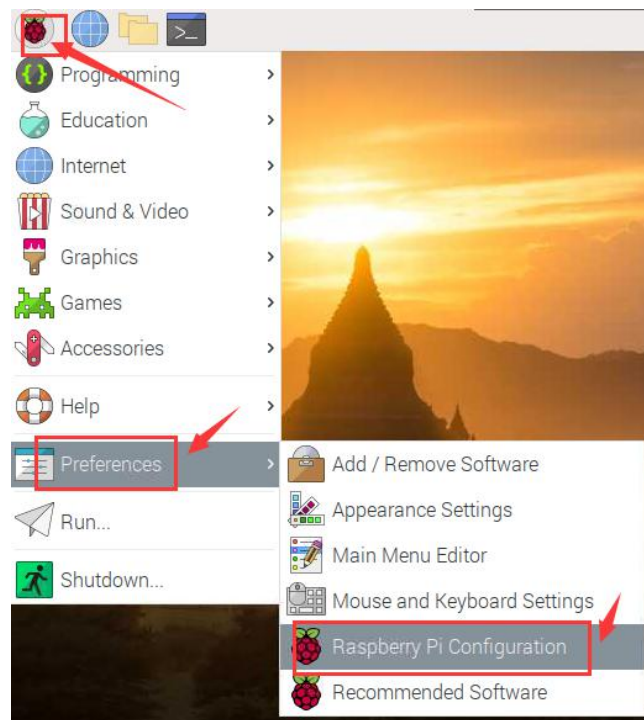

4. Select "Interfaces", set the SSH and I2C options to "Enabled", and then click "OK".

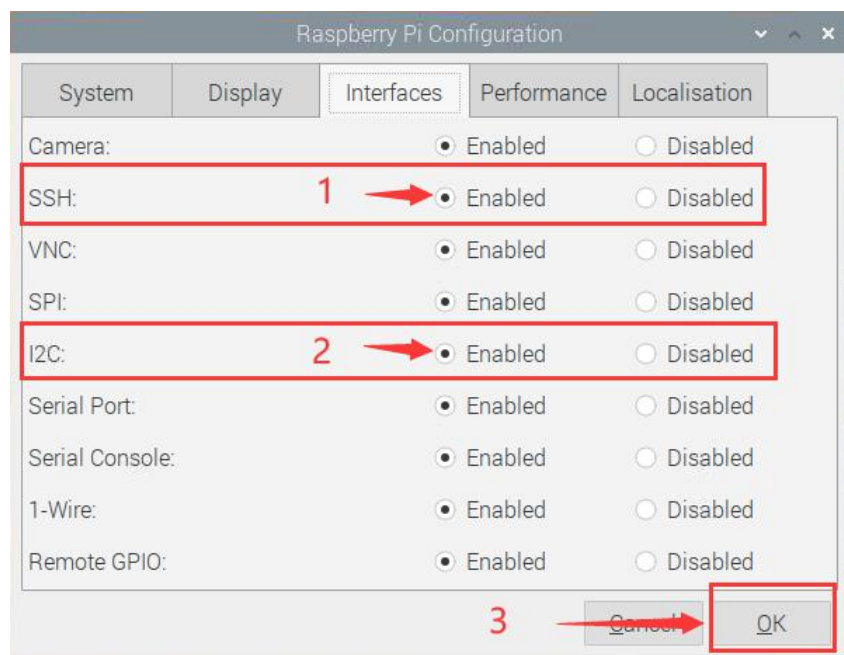

3.6 Remotely logging in to the Raspberry Pi OS

Before using SSH to connect to Raspberry Pi, you need to know the IP address of the Raspberry Pi and the software that supports SSH.

The remote login to the Raspberry Pi is achieved through the SSH protocol, and the Raspberry Pi can be remotely logged in through the software with the SSH protocol. For example: [Putty](#), [MobaXterm](#), etc. It is recommended that MAC users install [Putty](#) windows and install [MobaXterm](#).

Linux or Mac OS comes with SSH function, and you can also log in to the Raspberry Pi remotely through the terminal.

3.6.1 Obtaining the IP address of the Raspberry Pi

Method One:

Obtaining an IP address with an external display


We provide a simple and fast way to get the Raspberry Pi IP address. You need to prepare the following components:

- One Type-C data cable: used to supply power to the Raspberry Pi.
- One HDMI cable: used to connect the monitor.
- One mouse: used to operate.
- One monitor
- One Raspberry Pi



1. Connect the HDMI cable to the HDMI port of the monitor:



2. Turn on the monitor switch, and connect the mouse to the USB port of the Raspberry Pi, supply power to the Raspberry Pi with the Type-C data cable, then the Raspberry Pi starts. After entering the system interface, we move the mouse cursor to the "  " in the upper right corner, then it will display the IP address of the Raspberry Pi: 192.168.3.157 (the IP address of each Raspberry Pi is different). It is necessary for you to record this IP address for it is needed to log in to the Raspberry Pi OS later.



3. You can also check the following IP address by opening the command window of the Raspberry Pi and entering the following command, you need to write it down:

hostname -I

```
$ hostname -I
192.168.3.187 240e:fe:3207:4400:dc90:8830:4ee:22 240e:fe:3207:4424:6ca6:5817:e427:11d5
pi@raspberrypi:~$
```


raspberrypi 2% 0.10 GB / 1.89 GB 0.02 Mb/s 0.01 Mb/s 4 hours pi pi pi /: 77% /run: /

port MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>


Method Two:

Obtaining an IP address with a mobile phone


1. You need to download an APP called "Fing" on your phone, as shown below:

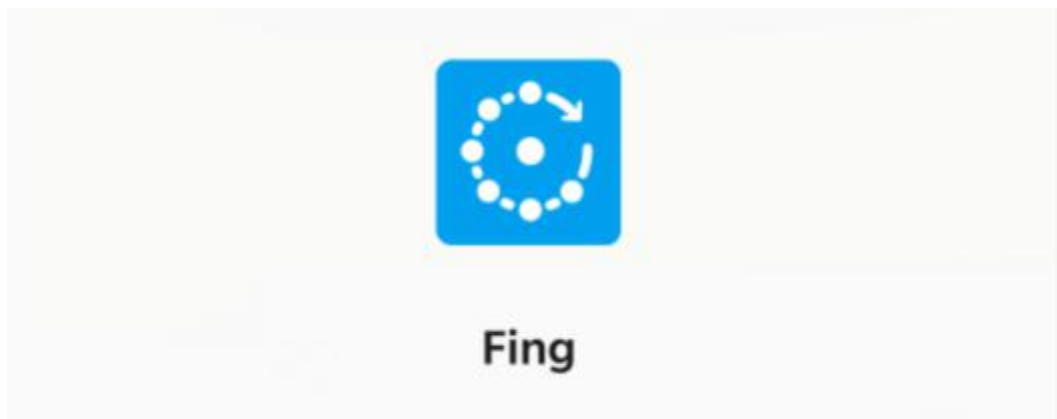


2. After the download is complete, your phone and Raspberry Pi need to be in the same local area network, that is, your phone and Raspberry Pi are connected to the same WIFI, then open "Fing" and click "Scan for devices":

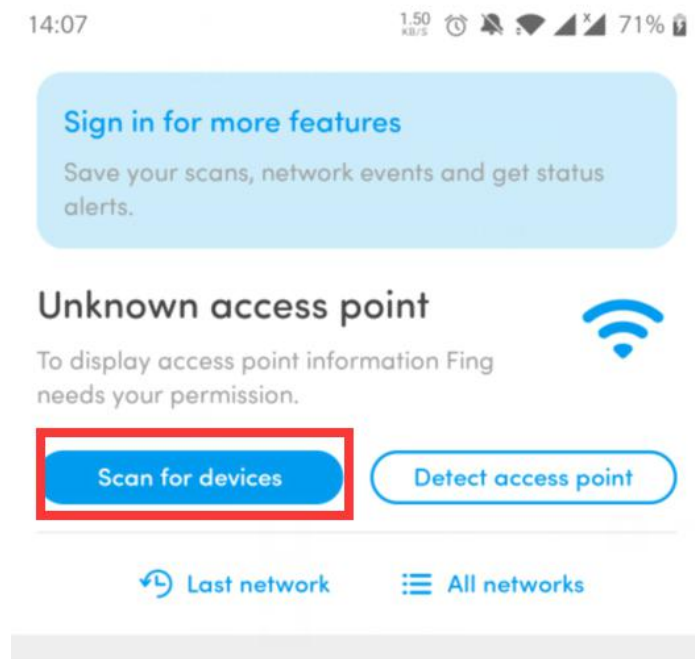

3. Click“[CONTINUE WITHOUT PERMISSION](#)”:

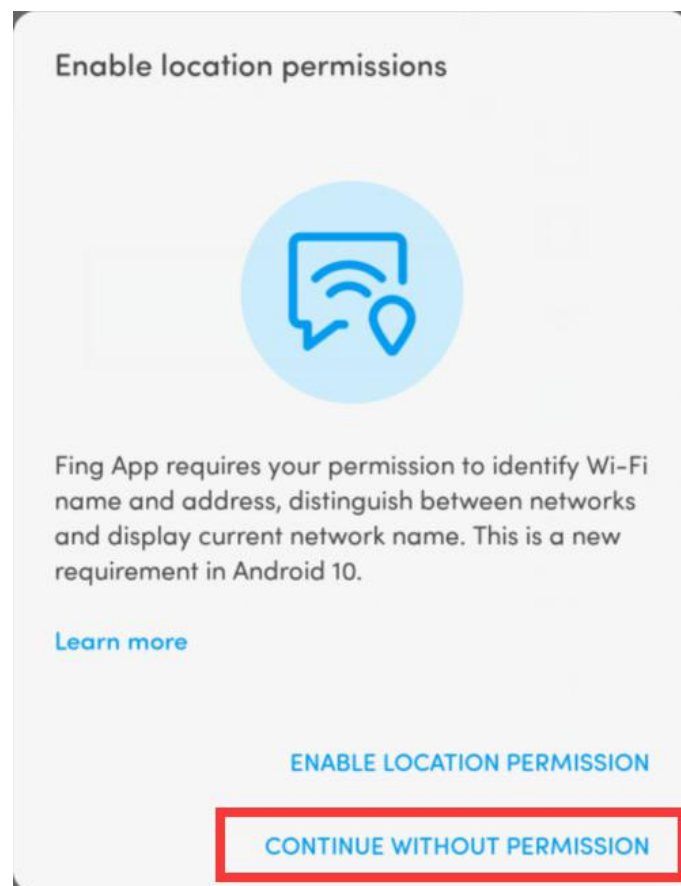

4. Click “OK”:

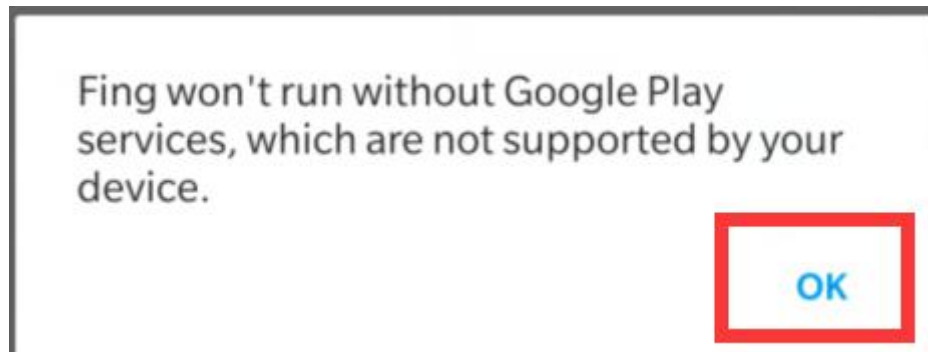

5. Wait for the scan to complete. In the list, you find a device named "Raspberry Pi". In the lower left corner, you will see the IP address of the Raspberry Pi: 192.168.3.157. You need to write down this IP address.



3.6.2 Remotely logging in to the Raspberry Pi OS

This course recommends two kinds of software for SSH login to Raspberry Pi. In actual use, you only need to download one. Linux or Mac OS comes with SSH function, you can log in to the Raspberry Pi remotely with the terminal without downloading software.


Putty

You need to download and install PuTTY corresponding to your computer OS version, and use it to log in to the Raspberry Pi. PuTTY download address:

<https://www.chiark.greenend.org.uk/~sgtatham/putty/latest.html>

1. Run PuTTY, enter the IP address of the Raspberry Pi into the Host Name, and click “Open”.


For example: 192.168.3.179

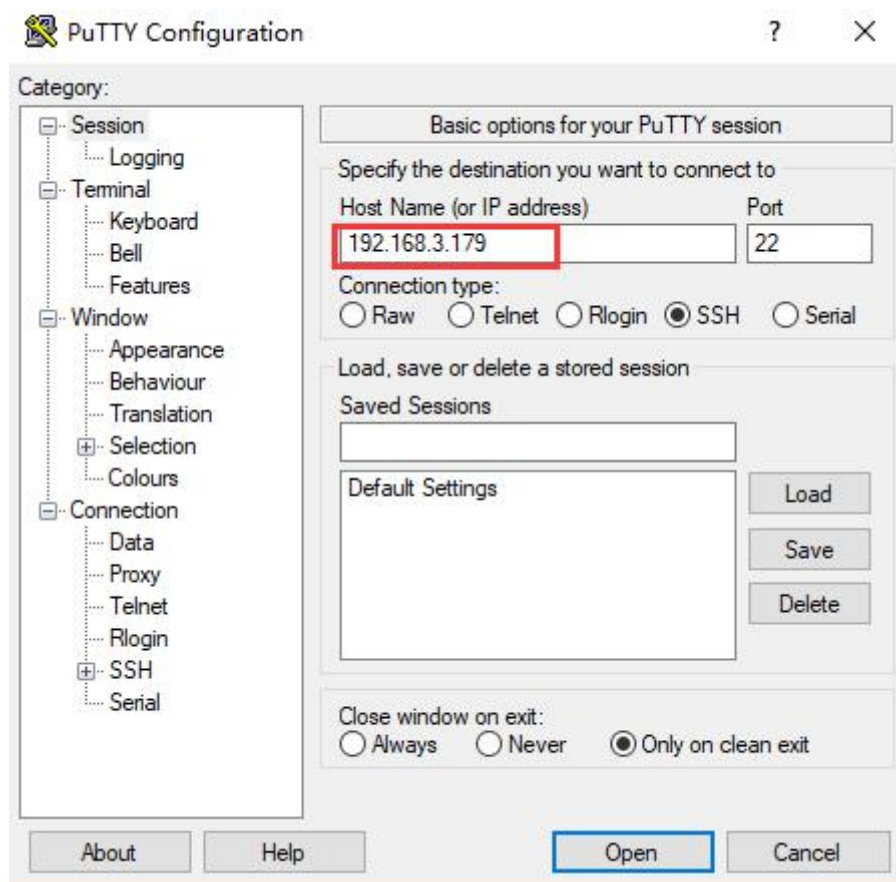

2. If it prompts Network error: Connection timed out, it means you probably entered the wrong IP address.

3. When the connection is normal, you will see a security warning. You can safely ignore it and click the "Yes" button. You will see this warning when PuTTY connects to a Raspberry Pi that has not been connected before.

4. You will now see the usual login prompt. Log in with the same username and password as the Pi itself. The default login name of Raspbian is **pi** and the password is **raspberrypi**. When entering the password, the screen will not display the entered password. After entering raspberrypi, press Enter to confirm.

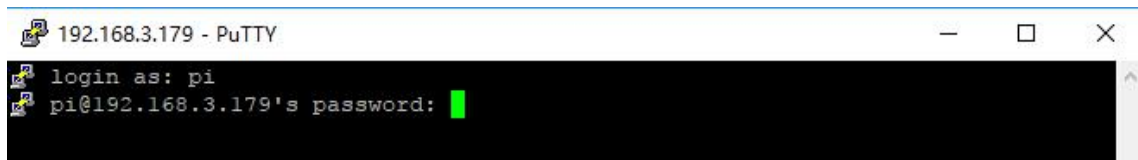

```
192.168.3.179 - PuTTY
login as: pi
pi@192.168.3.179's password: 
```

5. You should now have the Raspberry Pi prompt, which will be the same as the prompt on the Raspberry Pi itself.



```
pi@raspberrypi: ~
login as: pi
pi@192.168.3.179's password:
Linux raspberrypi 4.19.118-v7l+ #1311 SMP Mon Apr 27 14:26:42 BST 2020 armv7l

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Wed Aug 26 03:36:11 2020

SSH is enabled and the default password for the 'pi' user has not been changed.
This is a security risk - please login as the 'pi' user and type 'passwd' to set
a new password.

pi@raspberrypi:~ $
```


MobaXterm

MobaXterm is a terminal tool software that can be used to remotely control the Raspberry Pi.

1. Log in to the official website with a browser to download:

<https://mobaxterm.mobatek.net/download.html>

Choose the Free version to download.

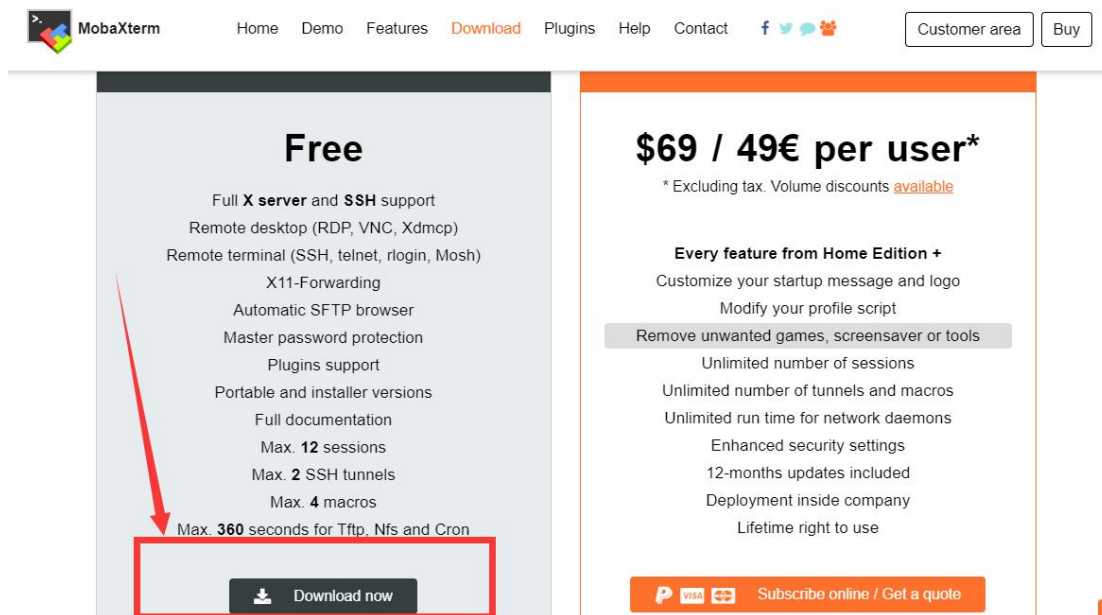


MobaXterm Home Demo Features **Download** Plugins Help Contact f t w

Customer area Buy

Free

- Full **X server** and **SSH** support
- Remote desktop (RDP, VNC, Xdmcp)
- Remote terminal (SSH, telnet, rlogin, Mosh)
- X11-Forwarding
- Automatic SFTP browser
- Master password protection
- Plugins support
- Portable and installer versions
- Full documentation
- Max. **12** sessions
- Max. **2** SSH tunnels
- Max. **4** macros
- Max. **360** seconds for Tftp, Nfs and Cron


 Download now

\$69 / 49€ per user*


* Excluding tax. Volume discounts [available](#)

Every feature from Home Edition +

- Customize your startup message and logo
- Modify your profile script
- Remove unwanted games, screensaver or tools
- Unlimited number of sessions
- Unlimited number of tunnels and macros
- Unlimited run time for network daemons
- Enhanced security settings
- 12-months updates included
- Deployment inside company
- Lifetime right to use

 Subscribe online / Get a quote

2. Download the Portable edition of MobaXterm Home Edition (current version):

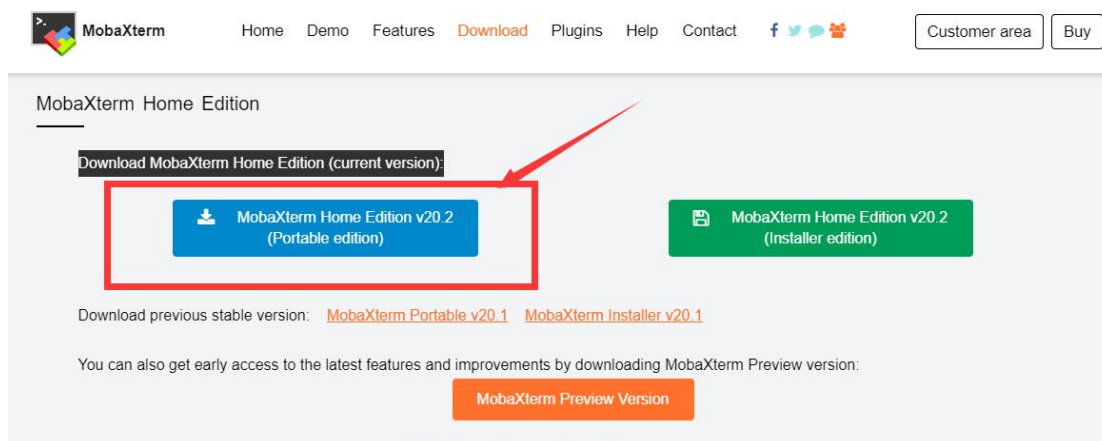



MobaXterm Home Demo Features **Download** Plugins Help Contact f t w

Customer area Buy

MobaXterm Home Edition


Download MobaXterm Home Edition (current version):

 MobaXterm Home Edition v20.2 (Portable edition)


 MobaXterm Home Edition v20.2 (Installer edition)


Download previous stable version: [MobaXterm Portable v20.1](#) [MobaXterm Installer v20.1](#)

You can also get early access to the latest features and improvements by downloading MobaXterm Preview version:

 MobaXterm Preview Version

3. Find the downloaded file [MobaXterm_Portable_v20.2.zip](#), double-click to open it, unzip it to get a new file.


 MobaXterm_Portable_v20.2.zip

 MobaXterm_Portable_v20.2


4. Open the unzipped folder, there is a file [MobaXterm_Personal_20.2.exe](#) inside.

名称	修改日期	类型
CygUtils.plugin	2020/1/24 23:49	PLUGIN 文件
MobaXterm_Personal_20.2.exe	2020/3/6 5:15	应用程序


5. Double-click to open [MobaXterm_Personal_20.2.exe](#), and then directly open the MobaXterm software. The interface is as follows:

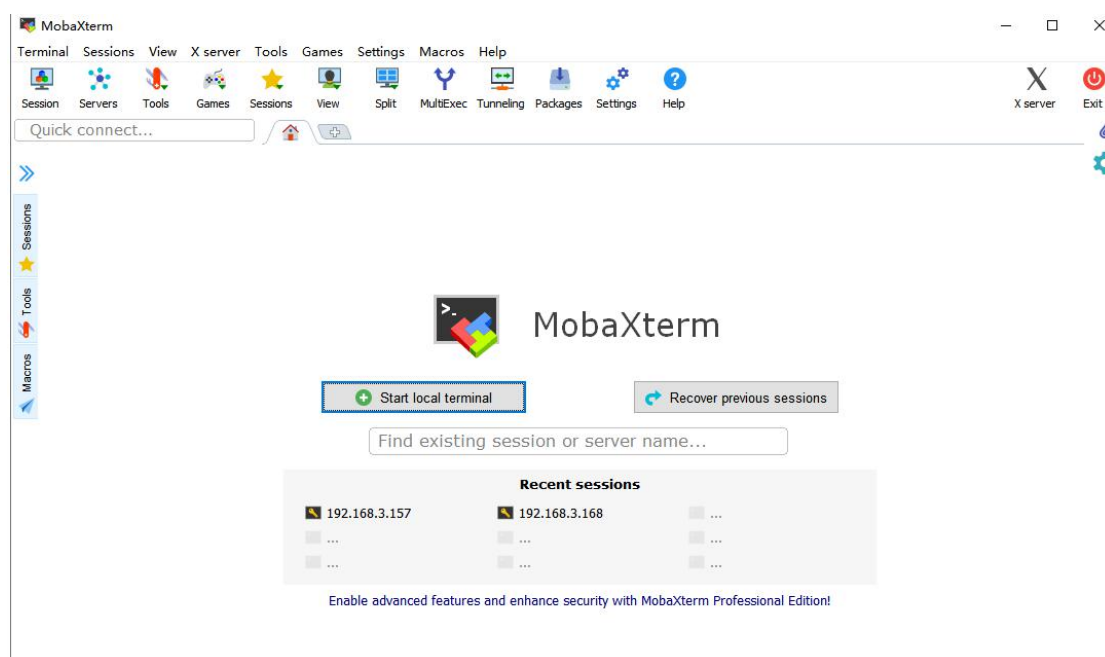


6. Click "Session" in the upper left corner.

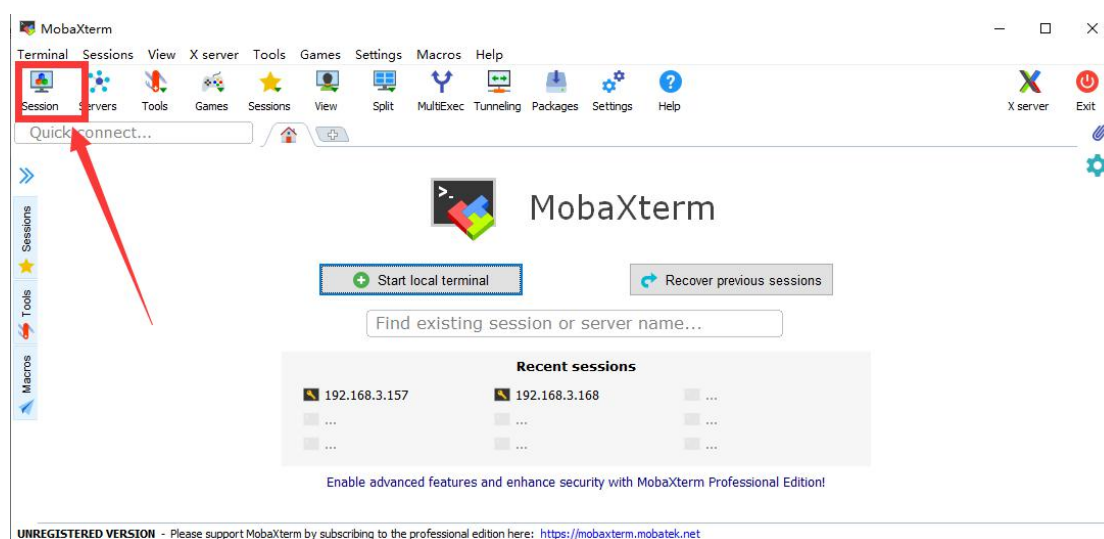

7. Click "SSH".

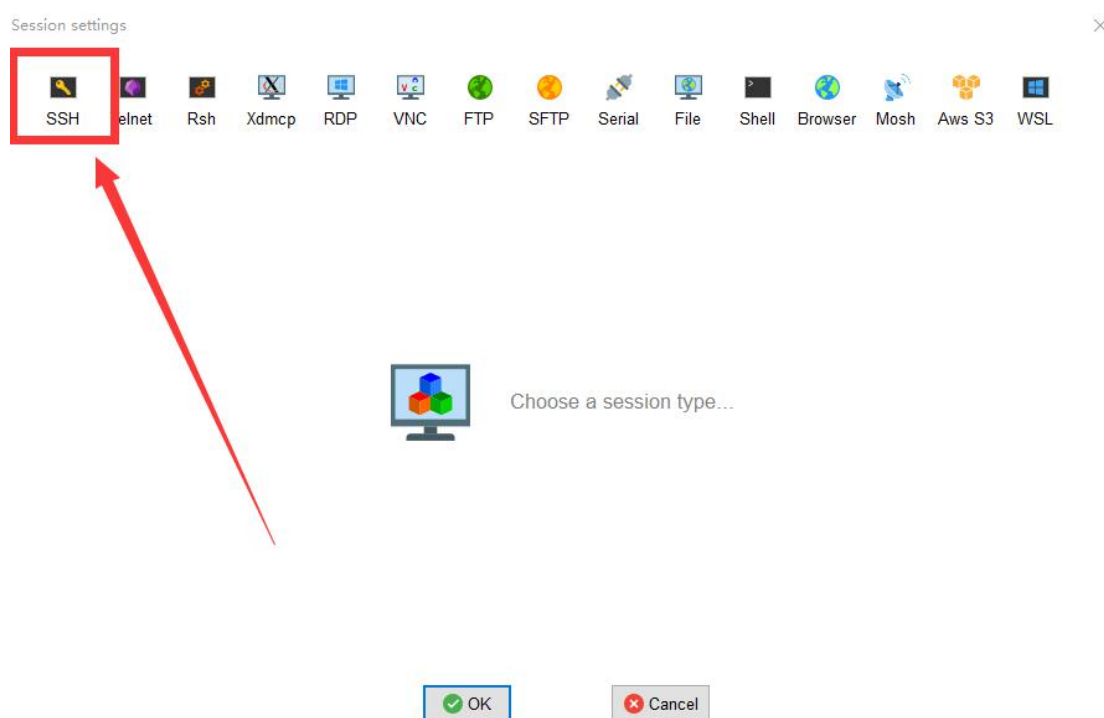


8. Enter the your IP address of the Raspberry Pi queried before, E.g: [192.168.3.157](#), and click "OK" to confirm.

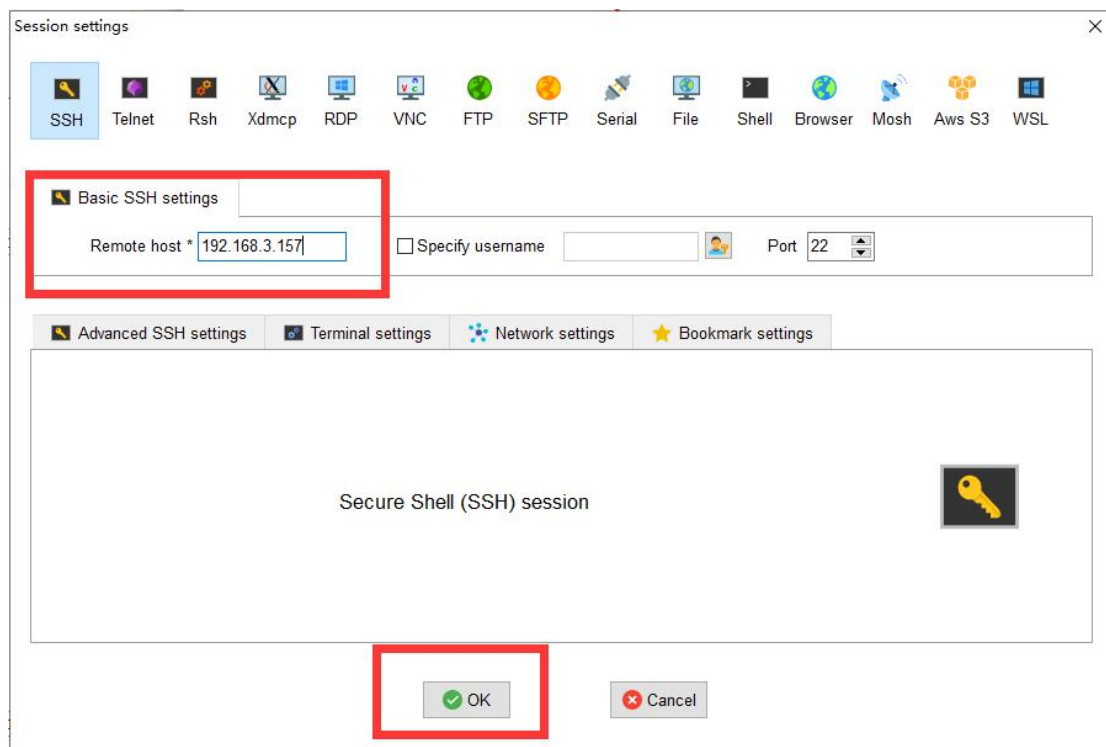


9. Enter the Raspberry Pi default account: **pi**, then press the Enter key, and then enter the Raspberry Pi default password: **raspberrypi**. Press Enter to log in to the Raspberry Pi system.


Note: Please distinguish between uppercase and lowercase.

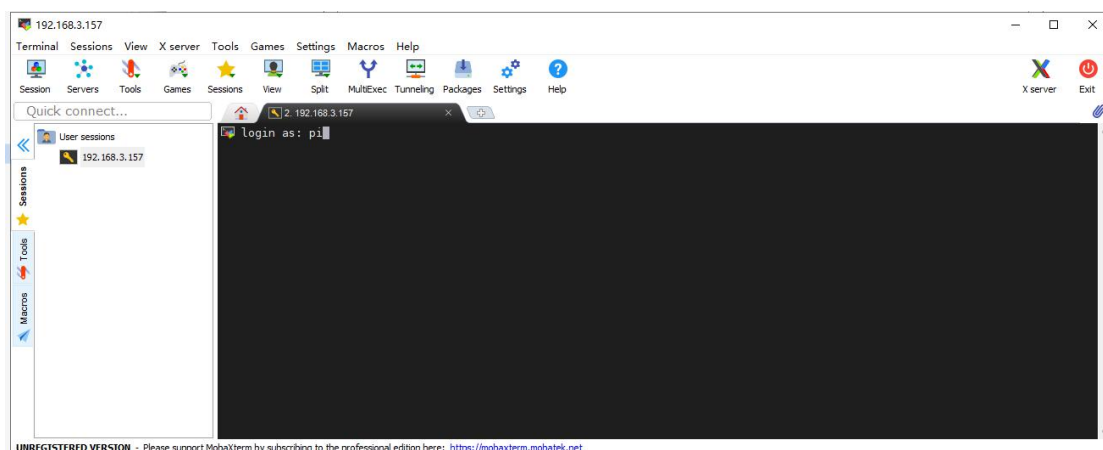


10. After successfully logging in to the Raspberry Pi OS, the following interface will appear:

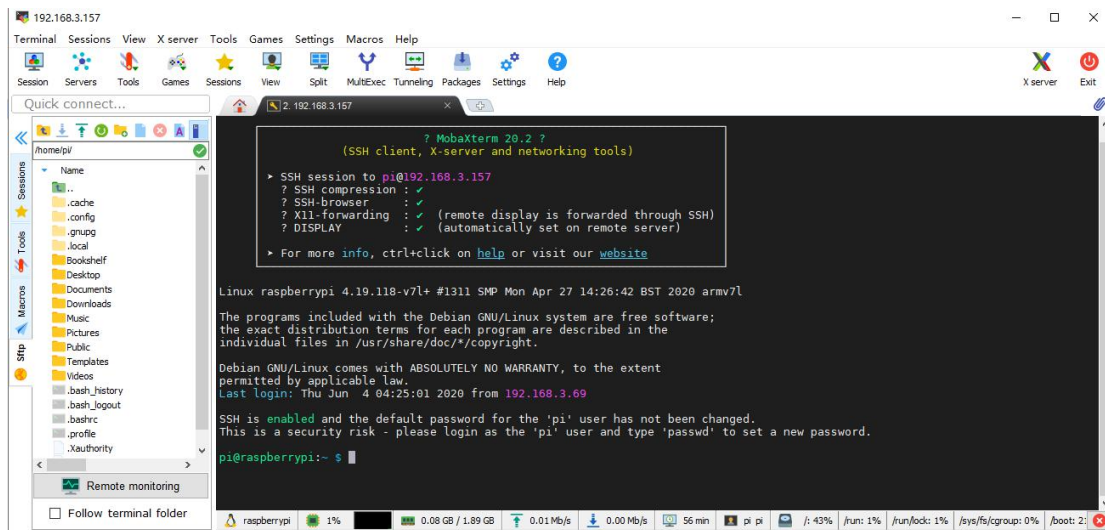

11. The red box in the figure below is the command window, where you can control the Raspberry Pi by entering commands.

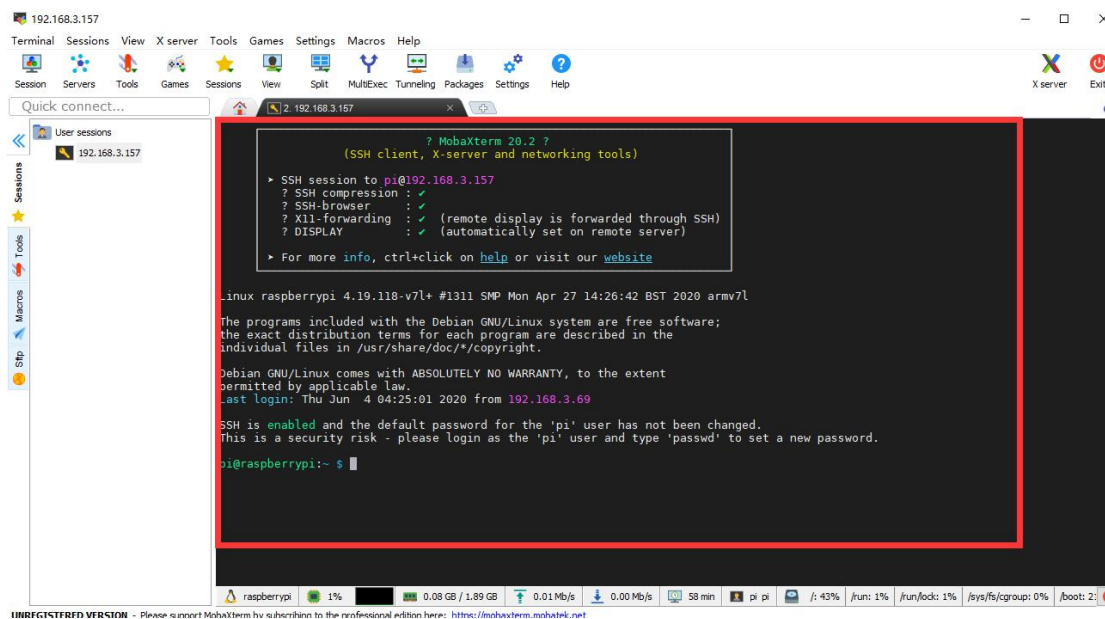

12. When we close the MobaXterm software and open MobaXterm again to connect to the Raspberry Pi, we can double-click the IP address under "User sessions" on the left: 192.168.3.157, enter the account name: pi, and you can directly connect to the Raspberry Pi.

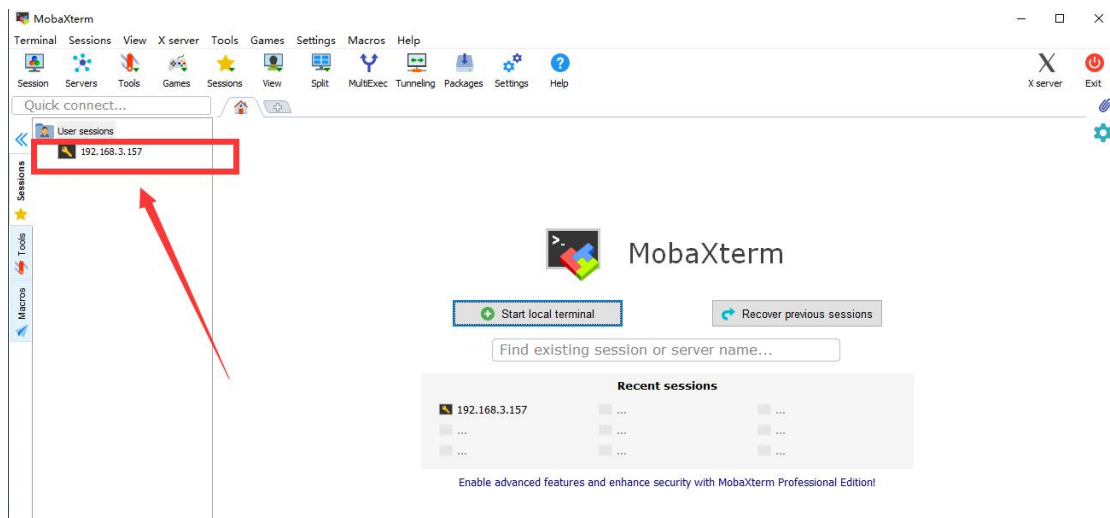

Windows10, Linux and Mac OS comes with SSH function

Steps to connect to Raspberry Pi via SSH:

1. Open a console terminal window.
2. The initial user name of the Raspberry Pi is “pi” and the initial password is “raspberrypi”.
3. Enter `ssh pi@<IP>` in the command line and replace <IP> with your Raspberry Pi IP address, as shown in the following example:

```
ssh pi@192.168.3.157
```

4. Press Enter, and the prompt Are you sure you want to continue connecting (yes/no)?
5. Enter “yes”, press Enter, “pi@192.168.3.157's password:” appears, fill in the initial password “raspberrypi” of the Raspberry Pi, pay attention to the case, there will be no changes on the screen during the password input, but it does not Indicates that the input was not successful, press enter after the input is complete.
6. Now you have logged in to the Raspberry Pi.

3.7 Downloading the code program to control the robot

- For the power supply of Raspberry Pi, please refer to this official document:

<https://www.raspberrypi.org/documentation/hardware/raspberrypi/power/README.md>

- Our Raspberry Pi robot driver board Arm HAT can directly supply power to the Raspberry Pi through the GPIO pins. However, because the software installation time in the Raspberry Pi is relatively long, it is not recommended to use battery power when installing the Raspberry Pi. The Raspberry Pi robot driver board Arm HAT need not be installed when installing the software in the Raspberry Pi. This does not affect the software installation, but when you run the installed program, you must connect the driver board, otherwise Will cause the program to report an error.
- If you manually download the image file provided by us, you only need to load the SD card into the Raspberry Pi to boot, and the program of the robot product will run automatically. You can skip this section.
- All the code of our product has been open sourced on GitHub, you need to download it to the Raspberry Pi and install the relevant dependencies before it can run normally. github address: https://github.com/aadept/aadept_roboticarm

1. After the operations in the previous section, we have logged in to the Raspberry Pi, and enter the following commands in the console:

```
sudo git clone https://github.com/aadept/aadept_roboticarm.git
```

2. After the input is complete, press enter to start downloading the robot program from GitHub. This process will continue for a period of time. Wait patiently for the download to complete.

Take [MobaXterm](#) as an example:

```

pi@raspberrypi:~ $
pi@raspberrypi:~ $
pi@raspberrypi:~ $ sudo git clone https://github.com/aadept/aadept_roboticarm.git
Cloning into 'aadept_roboticarm'...
remote: Enumerating objects: 8, done.
remote: Counting objects: 100% (8/8), done.
remote: Compressing objects: 100% (7/7), done.
remote: Total 8 (delta 0), reused 8 (delta 0), pack-reused 0
Unpacking objects: 100% (8/8), done.
pi@raspberrypi:~ $

```

3. After the download is complete, a new folder "aadept_rasptank" will appear, in which the product code is stored. Check through the Linux command "ls".

```
ls
```

```

pi@raspberrypi:~ $
pi@raspberrypi:~ $ ls
aadept_picar_b  Documents  Pictures  startup.sh
aadept_roboticarm Downloads  pocketsphinx-5prealpha Templates
Bookshelf      flask-video-streaming Public    test
create_ap      image.jpg  rpi-backup  Videos
Desktop        Music     sphinxbase-5prealpha
pi@raspberrypi:~ $

```

3.8 Installing the dependency library of program

- If you use "Manually download the image file we provide" to write the image file to the SD card, the dependency library of the robot product has been installed, you can directly boot the Raspberry Pi to start using the robot.
- If you used "Download the official Raspbian image file" to write the image file to the SD card, you can refer to this section to install the dependent libraries.
- When installing dependent libraries, the installation of some dependent libraries may fail due to network problems or dependent library version issues. For dependent libraries that fail to install, the program will automatically install multiple times.


- After the installation is complete, the Raspberry Pi will automatically restart. At this time, the remote login program of the Raspberry Pi via SSH will be terminated. Please log in again.
- When installing dependent libraries, the installation may fail due to network or regional reasons. If you encounter any problems, please contact us: support@adeept.com

We have prepared a script to install all the dependent libraries that need to be used and set up operations such as automatically running on startup.

Steps:

1. Enter the following code in the console and run the script setup.py to install the required dependent libraries:


```
sudo python3 adeept_roboticarm/setup.py
```



```
pi@raspberrypi:~ $  
pi@raspberrypi:~ $  
pi@raspberrypi:~ $ sudo python3 adeept_roboticarm/setup.py
```

2. Press Enter to confirm. The following operations are automatically completed by the script program. Depending on the network environment, this process may last for tens of minutes or several hours, just wait patiently.

3. After the installation is complete, the console will show text:

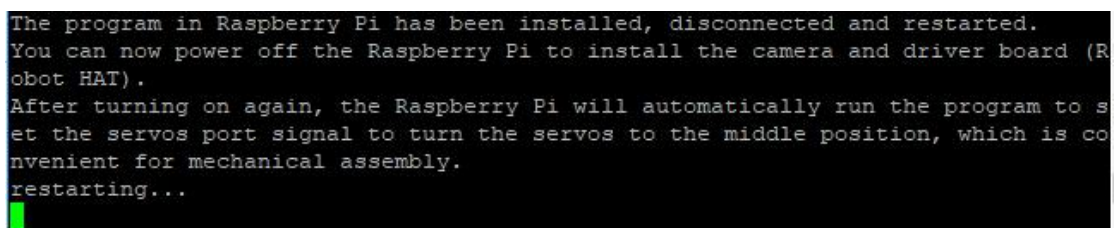

```
The program in Raspberry Pi has been installed, disconnected and restarted.  
You can now power off the Raspberry Pi to install the camera and driver board (R  
obot HAT).  
After turning on again, the Raspberry Pi will automatically run the program to s  
et the servos port signal to turn the servos to the middle position, which is co  
nvenient for mechanical assembly.  
restarting...  
█
```

After the installation is complete, the Raspberry Pi will automatically disconnect the SSH connection and restart. At this time, if you are using a Raspberry Pi connected by software such as Putty, there will be an error message such as Network error: Software caused connection abort, which is normal, just close the window.

Q&A

- Raspberry Pi can't boot.

Remove all parts on the driver board. Only connect the board to Raspberry Pi and power supply, reboot.

Observe if the green light of the Raspberry Pi is blinking.

If the indicator does not flash or the indicator flashes at the same interval, it means that the image file has not been burned successfully, please re-burn the system.

- "Remote side unexpectedly closed network connection" shows on a popup window.

There can be error prompts during installation because the Raspberry Pi will auto reboot after the installation, which will disconnect the board.

- Raspberry Pi failed to connect a WiFi.

Please connect to the Raspberry Pi through the mouse, keyboard, monitor, and then click the wifi icon in the upper right corner of the Raspberry Pi interface to enter the wifi information.

- I can not connect to the Raspberry Pi terminal via SSH

Please connect to the Raspberry Pi through the mouse, keyboard, monitor, and then click on the main menu in the upper left corner of the Raspberry Pi interface, select "preferences", select "Raspberry Pi Configuration", select "Interfaces", set the SSH bar to "Enabled", then Click "OK"

- SSH can't connect, error: WARNING: REMOTE HOST IDENTIFICATION HAS CHANGED!

Enter the following in the command line and press Enter

`ssh-keygen -R <the Raspberry Pi's IP address>`

For example:

```
ssh-keygen -R 192.168.3.157
```

Then you can SSH to the Raspberry Pi again

- When using a computer to copy `ssh` and `wpa_supplicant.conf` to the SD card, it prompts that there is no SD card

If this happens, unplug the card reader and connect it to the computer.